

# GO!® Bucket Hat

Step 1


Item Number: 55525

#### How to Assemble & Sew GO! Bucket Hat:

cut one complete bucket hat in 2 passes through the cutter.

# Step 2

The die is specially designed to

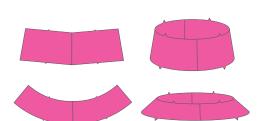

Sew Side and Brim pieces in a loop as shown using 1/4" seam allowance.

#### **Materials Needed**

• Outer fabric: 1/3 yard

• Lining: 1/3 yard

• Fusible Interfacing: 1/3 yard

SKU55525

Effective October 2024


Bucket hat designed to fit an average adult size.

Use pattern fabric for the lining to make your GO! Bucket Hat reversible.

Use the GO! Strip Cutter-21/2" (2" Finished) (55017 or 55014) to add a chin strap for windy days.


Add fusible interfacing product, such as June Tailor® T-shirt Project Fusible Interfacing, to main fabric for a stiffer hat.

Get creative with different combinations of fabrics, appliqué, embroidery or other embellishments for a hat that's truly you!

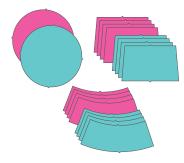


Fuse main fabric with June Tailor T-shirt Project Fusible Interfacing. Cut one Top, four Side, and four Brim pieces out of both outer and lining fabric.

#### Step 3

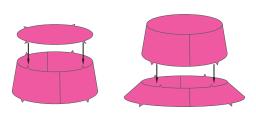


Line up notches on Top piece with notches on short edge of the Side piece loop. Sew together with a 1/4". Line up notches on Side piece with notches on short edge of the Brim piece loop. Sew together with a 1/4" seam allowance.

# Step 4

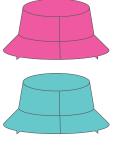


Repeat steps 2-3 with lining fabric pieces.

# Step 5

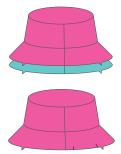

Put the outer fabric assembly and lining assembly right sides together aligning notches. Make two marks 3" apart on the edge of the brim.

# Step 6

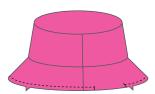

Sew 1/4" around the Brim edge starting and stopping on the marks leaving the 3" space open.

# Step 7



Turn hat right side out through the 3" opening. Fold the opening edges in 1/4", wrong sides together. Press and pin shut. Sew close to the edge around the brim.

