



GO!® Mini Oven Mitt

Item Number: 55640

How to Assemble & Sew GO! Mini Oven Mitt:

Step 1




Cut a 7" x 8¾", 7" x 9¾" and 7" x 7¼" rectangle each out of insulated batting, cotton batting, lining and outer fabric.

Step 2




Lay lining fabric right side down on table in front of you. Top with corresponding size of cotton batting, insulated batting, and outer fabric, in that order. Pin or baste together. Quilt as desired.

Step 3

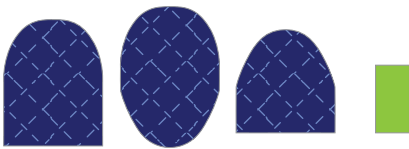

Lay "sandwiched" pieces on the die over the blades for the Outside, Inside Top and Inside Bottom with outer fabric facing up. Place one 2¼" x 4" fabric rectangle on the Hang Loop section. Place mat over and cut.


Step 4

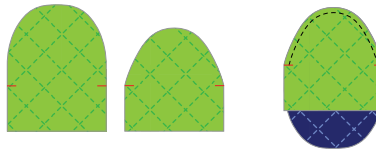

On the lining side of Outside and Inside Bottom pieces, mark a line 3" up from the bottom straight edge.

Place Inside Bottom on top of Inside Top matching the curve with outer fabric together. Sewing a ¼" seam allowance around the curve starting and stopping at marked lines on Inside Bottom.

Step 5

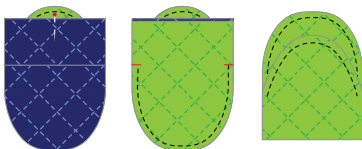


Fold the straight edge of Inside Bottom to the curved edge and pin. Place Outside piece on top of Inside Top matching the curve with outer fabric together. Sewing a ¼" seam allowance around the curve starting and stopping at marked lines on Inside Bottom. Fold Inside Top in half to form mitt fingers and align straight edges of Outer and Inside Bottom pieces.

Step 6



Fold edges of Hang Loop in half wrong sides together towards the center. Then fold in half as shown. Sew close to both long edges to secure.

Step 7

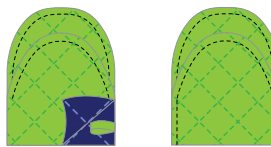

Fold Hang Loop in half with short edges together and place between the layers of the Outside and Inside Bottom 1½" from the bottom straight edge as shown.

Sew both side edges with ¼" seam allowance. Back tack a few times where all the layers meet for durability.

Step 8



Turn GO! Mini Oven Mitt right sides out and bind as desired.

Materials Needed

- Outer Fabric: ⅓ yard or 1 fat quarter
- Lining Fabric: ⅓ yard or 1 fat quarter
- Cotton Batting: ¼ yard
- Insulated Batting: ¼ yard

TIP

Use cotton fabric and a heat resistant batting such as Insul-Bright® to protect your hands from burns.

For best results, sandwich the insulated batting and cotton batting between outer layer and lining. Quilt the sandwich prior to cutting. Cut only one quilted sandwich at a time.

Use June Tailor® Basting Spray to securely keep layers in place while quilting. Use the GO! Strip Cutter-2½" (2" Finished) (55017 or 55014) for binding.